

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTE
HOME
BLUETOOTH
CD
LINE 1
LINE 2
NET
OPTICAL
PANDORA
PHONO
TUNER
DISPLAY
NOW PLAYING
SETUP
OPTION
VOLUME +
VOLUME -
SKIP NEXT
SKIP RPEV
UP
DOWN
LEFT
RIGHT
ENTER

RETURN
SLEEP
SHUFFLE
DIMMER
MEMORY
BAND
STOP
PLAY / PAUSE
REW / SKIP NEXT
FWD / SKIP PREV
PRESET >
< PRESET
SPEAKERS A
SPEAKERS B
REPEAT

POWER, MUTE, HOME, MENU, AZULTOOTH, LINE 1, LINE 2, NET, OPTICAL, PANDORA, PHONO, TUNER, DISPLAY, NOW PLAYING, SETARRIBA, OPTION, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP RPEV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, SHUFFLE, TV/DTV, DIMMER, INFO, MEMORY, EPG, BAND, FAV, STOP, PLAY / PAUSE, AMARILLO, REW / SKIP NEXT, FWD / SKIP PREV, PRESET x, PRESET, SPEAKERS A, SPEAKERS B, REPEAT, .