

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTE
/ MENU
DELETE
1/2/3/4/5
6/7/8/9/0
SOURCE
CAPS / NUM
/ HOME
ZOOM
/ SETUP
AA / SUBTITLE
PAGE UP
PAGE DOWN
UP
DOWN
LEFT
RIGHT
ENTER
/ RETURN
/ TIME SEEK
/ TV MODE
INFO
/ FILE MODE
/ ANGLE

RED
GREEN
YELLOW
BLUE
Zzz / STANDBY
/ AUDIO
SKIP NEXT
SKIP PREV
/ REPEAT
SLOW
/ TITLE
EJECT
PAUSE
STOP
REW
PLAY
FWD

POWER, MUTE, / MENU, MENU, DELETE, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, CAPS / NUM, / HOME, ZOOM, / SETARRIBA, A / SUBTITLE, PAGE ARRIBA, PAGE ABAJO, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, / TIME SEEK, SLEEP, / TV MODE, TV/DTV, INFO, / FILE MODE, EPG, / ANGLE, FAV, ROJO, VERDE, AMARILLO, AZUL, Zzz, STANDBY, / AUDIO, SKIP NEXT, SKIP PREV, / REPEAT, SLOW, / TITLE, EJECT, PAUSE, STOP, REW, PLAY, FWD, .