

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.



AUDIO
DISC MENU / REC END S
SEARCH
1/2/3/4/5
6/7/8/9/0-CLEAR
INPUT SELECT
RANDOM / CM SKIP
DISPLAY / CLOCK/COUNT
ZOOM
TOP MNEU
SUBTITLE
SKIP NEXT
SKIIP PREV
UP / CH/TRK+
DOWN / CH/TRK -
LEFT
RIGHT
ENTER
/ RETURN
SLOW
TV / VIDEO
i / SETUP
PROGRAM
MARK

OPEN / CLOSE
PAUSE
STOP
REC
PLAY
DVD
VIDEO
SHOWVIEW
ANGLE
C. LOCK
/ REPEAT
A - B / SP/LP

POWER, AUDIO, MUTE, DISC MENU / REC END S, MENU, SEARCH, EXIT, 1/2/3/4/5, 6/7/8/9/, 0CLEAR, 0INPUT SELECT, / SOURCE, RANDOM / CM SKIP, DISPLAY / CLOCK/COUNT, ZOOM, TOP MNEU, SUBTITLE, SKIP NEXT, SKIIP PREV, ARRIBA / CH/TRK+, ABAJO / CH/TRK, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLOW, SLEEP, TV / VIDEO, TV/DTV, i / SETARRIBA, INFO, PROGRAM, EPG, MARK, FAV, OPEN / CLOSE, PAUSE, STOP, REC, ROJO, PLAY, AMARILLO, DVD, VIDEO, SHOWVIEW, ANGLE, C LOCK, / REPEAT, B / SP/LP, .