FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando. El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto. Revise que localiza todas las funciones que necesita antes de realizar la compra.



O	
OD / AUDIO	
DISC MENU	
CLEAR	
1/2/3/4/5	
6/7/8/9/0	
⊕ / INPUT SELEC	т
VARIABLE REPLA	Y
ZOOM	
SETUP	
VARIABLE SKI	Р
SKIP NEXT	
SKIP PREV	
UP	
DOWN	
LEFT	
RIGHT	
ENTER	
RETURN	
TIME SLIP	
REC MODE	
≣i / INFO	
TOP MENU	
OPEN / CLOSE	9
PAUSE	

STOP	
REC	
REW	
PLAY	
FWD	
DVD	
HDD	
PROG+	
PROG -	
	7
	7
	\neg
	7
	┪
	╡
	\dashv
	\dashv
	-
	\dashv
	\dashv
	_

POWER, / AUDIO, MUTE, DISC MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0 / INPUT SELECT, / SOURCE, VARIABLE REPLAY, ZOOM, SETARRIBA, VARIABLE SKIP, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, TIME SLIP, SLEEP, REC MODE, TV/DTV, / INFO, INFO, TOP MENU, FAV, OPEN / CLOSE, / NET TV, PAUSE, STOP, / SMART, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, DVD, HDD, PROG+, PROG, .