

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
⌂ / HOME
i / DISPLAY
HOLD
⚙️ / SET
MIX / TXT
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
ENTER
↻ / MOUSE
SLEEP
TV / RADIO
INDEX

SUBPAGE
FAV
ASPECT
FREEZE
BROWSER / WWW
RED
GREEN
YELLOW
BLUE
AUDIO
CANCEL
REVEAL
SIZE
SCREENSHOT
SUBTITLE
SKIP NEXT
SKIP PREV
↻ / REFRESH
P - MODE
S - MODE
STOP
REW
PLAY / PAUSE
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, / HOME, i / DISPLAY, HOLD, / SET, MIX / TXT, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, / MOUSE, BACK, SLEEP, TV / RADIO, TV/DTV, INDEX, INFO, SUBPAGE, EPG, FAV, ASPECT, / NET TV, FREEZE, BROWSER / WWW, / SMART, ROJO, VERDE, AMARILLO, AZUL, AUDIO, CANCEL, SIFT+EXIT, REVEAL, SIZE, SCREENSHOT, SUBTITLE, SKIP NEXT, SKIP PREV, / REFRESH, MODE, STOP, REW, PLAY / PAUSE, FWD, .