FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando. El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto. Revise que localiza todas las funciones que necesita antes de realizar la compra.



DELETE FUNCTION RANDOM SKIP NEXT / UP/FF SKIP PREV / DN/FB +10 -10 REPEAT OP / CLS FOLDER PRESET STOP RECORD PLAY / PAUSE		POWER
RANDOM SKIP NEXT / UP/FF SKIP PREV / DN/FB +10 -10 REPEAT OP / CLS FOLDER PRESET STOP RECORD		DELETE
SKIP NEXT / UP/FF SKIP PREV / DN/FE +10 -10 REPEAT OP / CLS FOLDER PRESET STOP RECORD	F	UNCTION
SKIP PREV / DN/FB +10 -10 REPEAT OP / CLS FOLDER PRESET STOP RECORD	Į.	RANDOM
+10 -10 REPEAT OP / CLS FOLDER PRESET STOP RECORD	SKIF	NEXT / UP/FF
-10 REPEAT OP / CLS FOLDER PRESET STOP RECORD	SKIP	PREV / DN/FB
REPEAT OP / CLS FOLDER PRESET STOP RECORD		+10
OP / CLS FOLDER PRESET STOP RECORD		-10
FOLDER PRESET STOP RECORD		REPEAT
PRESET STOP RECORD		OP / CLS
STOP RECORD		FOLDER
RECORD		PRESET
		STOP
PLAY / PAUSE		RECORD
	PL	AY / PAUSE

_		
_		
-		
<u> </u>		
-		_
-		
-		-
-		
-		

POWER, DELETE, EXIT, FUNCTION, / SOURCE, RANDOM, SKIP NEXT / ARRIBA/FF, SKIP PREV / DN/FB, 0ARRIBA, 0ABAJO, REPEAT, BACK, OP / CLS, TV/DTV, FOLDER, EPG, PRESET, FAV, STOP, / SMART, RECORD, ROJO, PLAY / PAUSE, AMARILLO, .