

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY / ON
/ AUDIO
HOME MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
INPUT SELECT
NAVI MARK
DISPLAY
/ ANGLE
CHP MARK
/ SUBTITLE
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
TIMER REC
TV / DVD
DISC HISTORY
PLAY LIST / MENU
DISC NAVIG. / TOP MENU

OPEN / CLOSE
PAUSE
STOP
REC
REW
PLAY
FWD
SHOWVIEW
CHANNEL+
CHANNEL -
/ SKIP
/ BACK
< STEP / SLOW
STEP / SLOW >
EASY TIMER
TV DIRECT REC
STOP REC
REC MODE
PLAY MODE

STANDBY / ON, POWER, / AUDIO, MUTE, HOME MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, / SOURCE, NAVI MARK, DISPLAY, / ANGLE, CHP MARK, / SUBTITLE, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, TIMER REC, SLEEP, TV / DVD, TV/DTV, DISC HISTORY, INFO, PLAY LIST / MENU, EPG, DISC NAVIG / TOP MENU, FAV, OPEN / CLOSE, / NET TV, PAUSE, STOP, / SMART, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, SHOWVIEW, CHANNEL+, CHANNEL, / SKIP, / BACK, STEP / SLOW, STEP / SLOW x, EASY TIMER, TV DIRECT REC, STOP REC, REC MODE, PLAY MODE, .