

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



SYSTEM POWER
CALL / PANEL
CLEAR
1/2/3/4/5
6/7/8/9/10
FUNCTION
+10
OSD
ENTER / MEMORY
RANDOM
TIME
VOLUME+
VOLUME -
SKIP NEXT / PRESET+
SKIP PREV / PRESET -
REPEAT / PTY
SLEEP
TONE / SDB
TITLE / CHARACTER
PROG / DIRECT
DISC SKIP / EON
STOP / BAND
REW / TUNING -
CD PLAY/PAUSE
FWD / TUNING+

TUNER
< TAPE
TAPE >
MD PLAY/PAUSE
CD - R PLAY/PAUSE

SYSTEM POWER, POWER, CALL / PANEL, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/1, 0FUNCTION, / SOURCE, OSD, ENTER / MEMORY, RANDOM, TIME, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT / PRESET+, SKIP PREV / PRESET, REPEAT / PTY, BACK, SLEEP, TONE / SDB, TV/DTV, TITLE / CHARACTER, INFO, PROG / DIRECT, EPG, DISC SKIP / EON, FAV, STOP / BAND, / SMART, REW / TUNING, VERDE, CD PLAY/PAUSE, AMARILLO, FWD / TUNING+, AZUL, TUNER, TAPE, IZQUIERDA, TAPx, DERECHA, MD PLAY/PAUSE, R PLAY/PAUSE, .