

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
 Revise que localiza todas las funciones que necesita antes de realizar la compra.



DVD POWER
AUDIO
MENU
CANCEL / 0000
1/2/3/4/5
6/7/8/9/0-AUX
SHOWVIEW/VIDEO PLUS+
DISPLAY
PROGRESSIVE SCAN
SET UP
SUBTITLE
TV VOL+
TV VOL -
SKIP LEFT
SKIP RIGHT
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
/ TIMER
TV / VIDEO
NAVIGATION
PROG

MEMO / MARK
OPEN / CLOSE
PAUSE
STOP / CLEAR
REC
REW / SLOW -
PLAY
FWD / SLOW+
TV POWER
TOP MENU
VHS
DVD
ANGLE/LIVE CHECK
PR+
PR -
/ SAT
ON SCREEN
EJECT
REC MODE/REMAIN

DVD POWER, POWER, AUDIO, MUTE, MENU, CANCEL /, EXIT, 1/2/3/4/5, 6/7/8/9/, 0AUX, 0SHOWVIEW/VIDEO PLUS+, DISPLAY, PROGRESSIVE SCAN, SET ARRIBA, SUBTITLE, TV VOL+, VOL+, TV VOL, VOL, SKIP IZQUIERDA, SKIP DERECHA, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, / TIMER, SLEEP, TV / VIDEO, TV/DTV, NAVIGATION, INFO, PROG, EPG, MEMO / MARK, FAV, OPEN / CLOSE, / NET TV, PAUSE, STOP / CLEAR, / SMART, REC, ROJO, REW / SLOW, VERDE, PLAY, AMARILLO, FWD / SLOW+, AZUL, TV POWER, TOP MENU, VHS, DVD, ANGLE/LIVE CHECK, PR+, / SAT, ON SCREEN, EJECT, REC MODE/REMAIN, .