

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
AUDIO
MENU
CANCEL
1/2/3/4/5
6/7/8/9/0-AUX
NAVIGATION
LIVE
PROGRESSIVE SCAN
SET UP
VPS / PDC / SUBTITLE
VOL+
VOL -
SKIP PREV / DAY -
SKIP NEXT / DAY+
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
REC MODE / REMAIN
TV / VIDEO
INDO
GUIDE

MEMO / MARK
PAUSE
STOP / CLEAR
REC
REW / SLOW -
PLAY
FWD / SLOW+
TV MUTE
TOP MENU
VHS
HDD
DVD
EDIT
DUBBING
ANGLE / LIVE CHECK
PR+
PR -
? / HELP
PROG
RED / DISPLAY
GREEN / ON SCREEN
YELLOW /
BLUE /

POWER, AUDIO, MUTE, MENU, CANCEL, EXIT, 1/2/3/4/5, 6/7/8/9/, 0AUX, 0NAVIGATION, LIVE, PROGRESSIVE SCAN, SET ARRIBA, VPS / PDC / SUBTITLE, VOL+, VOL, SKIP PREV / DAY, SKIP NEXT / DAY+, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, REC MODE / REMAIN, SLEEP, TV / VIDEO, TV/DTV, INDO, INFO, GUIDE, EPG, MEMO / MARK, FAV, PAUSE, STOP / CLEAR, / SMART, REC, ROJO, REW / SLOW, VERDE, PLAY, AMARILLO, FWD / SLOW+, AZUL, TV MUTE, TOP MENU, VHS, HDD, DVD, SHFIT+3, EDIT, DUBBING, ANGLE / LIVE CHECK, PR+, / HELP, PROG, ROJO / DISPLAY, VERDE / ON SCREEN, AMARILLO /, AZUL /, .