

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>A. ONLY</b>
<b>MENU</b>
<b>QUICK REPLAY</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>FUNCTIONS</b>
<b>+10</b>
<b>DISPLAY</b>
<b>RE - MASTER</b>
<b>ANGLE / PAGE</b>
<b>GROUP</b>
<b>VOLUME+</b>
<b>VOLUME -</b>
<b>SKIP NEXT</b>
<b>SKIP PREV</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>
<b>ENTER</b>
<b>RETUNR</b>
<b>SLEEP</b>
<b>SURROUND</b>
<b>INFO</b>

<b>PGM</b>
<b>TOP MENU</b>
<b>SUB WOOFER</b>
<b>PAUSE</b>
<b>STOP</b>
<b>REC</b>
<b>REW</b>
<b>DVD/CD PLAY</b>
<b>FWD</b>
<b>AUTO OFF</b>
<b>TAPE</b>
<b>TUNER / AUX</b>
<b>H.BASS</b>
<b>PLAY/REC TIMER</b>
<b>PLAY MODE</b>
<b>SOUND</b>
<b>REPEAT</b>
<b>CLOCK / TIMER</b>
<b>CM - SKIP</b>
<b>DIMMER</b>
<b>ALL DISC</b>
<b>DISC</b>

POWER, AONLY, MUTE, MENU, QUICK REPLAY, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0FUNCTIONS, / SOURCE, DISPLAY, MASTER, ANGLE / PAGE, GROARRIBA, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETUNR, BACK, SLEEP, SURROUND, TV/DTV, INFO, PGM, EPG, TOP MENU, FAV, SUB WOOFER, / NET TV, PAUSE, STOP, / SMART, REC, ROJO, REW, VERDE, DVD/CD PLAY, AMARILLO, FWD, AZUL, AUTO OFF, TAPE, TUNER / AUX, HBASS, PLAY/REC TIMER, PLAY MODE, SOUND, REPEAT, CLOCK / TIMER, SHFIT+SLEEP, SKIP, DIMMER, ALL DISC, DISC, .