

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER ON
CD SYNC
CLEAR
1/2/3/4/5
6/7/8/9/0
+10
RDS MODE
DISC SKIP
TUNER
TUNER
TIME
VOLUME+
VOLUME -
SKIP NEXT
SKIP PREV
PRESET CALL -
PRESET CALL+
REPEAT
SLEEP
SHUFFLE
DIMMER
PROGRAM
PAUSE
STOP
REW
PLAY

FWD
STANDBY
TAPE 1
MD / TAPE 2
CD
AUX
PHONO
TUNER
MD FWD
MD REW
MD SKIP NEXT
MD SKIP PREV
MD STOP
MD PLAY
MD PAUSE
REPEAT 1/ALL
REPEAT A – B
TAPE PLAY REV.
TAPE PAUSE
TAPE STOP
TAPE RECORD
TAPE REW/SKIP PREV
TAPE PLAY
TAPE FWD/SKIP NEXT

POWER ON, POWER, CD SYNC, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0+1, RDS MODE, DISC SKIP, TUNER, TIME, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, PRESET CALL, IZQUIERDA, PRESET CALL+, DERECHA, REPEAT, BACK, SLEEP, SHUFFLE, TV/DTV, DIMMER, INFO, PROGRAM, EPG, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, STANDBY, TAPE 1, MD / TAPE 2, AUX, PHONO, MD FWD, VOL+, MD REW, VOL, MD SKIP NEXT, MD SKIP PREV, MD STOP, MD PLAY, MD PAUSE, REPEAT 1/ALL, SIFT+BACK, REPEAT A, TAPE PLAY REV, TAPE PAUSE, TAPE STOP, TAPE RECORD, ROJO, TAPE REW/SKIP PREV, TAPE PLAY, TAPE FWD/SKIP NEXT, .