

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.



ON / STANDBY
AUDIO
MENU
CLEAR / DISPLAY
1/2/3/4/5
6/7/8/9/0
SLOW
ON SCREEN
ANGLE / ZOOM
DOLBY
SUBTITLE
MIC VOL+
MIC VOL -
TUNING+
TUNING -
UP
DOWN
LEFT
RIGHT
ENTER
... / RETURN
CLOCK / TIMER
MEMORY / DIMMER
DIRECT
PAUSE

STOP
REW / SKIP PREV
PLAY / PAUSE
FWD / SKIP NEXT
AUX
DVD / CD
TUNER
USB

ON / STANDBY, POWER, AUDIO, MUTE, MENU, CLEAR / DISPLAY, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SLOW, ON SCREEN, ANGLE / ZOOM, DOLBY, SUBTITLE, MIC VOL+, VOL+, MIC VOL, VOL, TUNING+, TUNING, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, CLOCK / TIMER, SLEEP, MEMORY / DIMMER, EPG, DIRECT, FAV, PAUSE, STOP, / SMART, REW / SKIP PREV, VERDE, PLAY / PAUSE, AMARILLO, FWD / SKIP NEXT, AZUL, AUX, DVD / CD, TUNER, USB, .