

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



HOME
ENHANCER
BLUETOOTH
FM/DAB
NET
USB
SCENE BD/DVD
SCENE NET
SCENE RADIO
SCENE TV
DIRECT
DISPLAY
POPUP / MENU
SETUP
TOP MNEU
VOLUME +
VOLUME -
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT

ENTER
RETURN
SLEEP
BASS
OPTION
MEMORY
STRAIGHT
PAUSE
STOP
REW / TUNING -
PLAY
FWD / TUNING+
PROGRAM+
PROGRAM -
PRESET PREV
PRESET NEXT
RED
GREEN
YELLOW
BLUE

POWER, MUTE, HOME, MENU, ENHANCER, EXIT, AZULTOOTH, FM/DAB, NET, USB, SCENE BD/DVD, SCENE NET, SCENE RADIO, SCENE TV, DIRECT, DISPLAY, POPARRIBA / MENU, SETARRIBA, TOP MNEU, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, BASS, TV/DTV, OPTION, INFO, MEMORY, EPG, STRAIGHT, FAV, PAUSE, STOP, / SMART, REW / TUNING, VERDE, PLAY, AMARILLO, FWD / TUNING+, AZUL, PROGRAM+, PROGRAM, PRESET PREV, PRESET NEXT, ROJO, .