

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
DIMMER
NIGHT
AUX
BLU RAY
CBL / SAT
DVD
GAME
PORTABLE
TUNER
TV AUDIO
SHIFT
BAND
TONE
SETUP
CH LEVEL
VOLUME+
VOLUME -
CH+
CH -
UP
DOWN
LEFT
RIGHT

ENTER
BACK
SLEEP
MODE
INFO
MEMORY
RESTORER
AUDIO
QUICK SELECT 1
QUICK SELECT 2
QUICK SELECT 3
QUICK SELECT 4
AUDIO DELAY+
AUDIO DELAY -
TUNE+
TUNE -
SURROUND+
SURROUND -

POWER, MUTE, DIMMER, MENU, NIGHT, EXIT, AUX, BLU RAY, CBL / SAT, DVD, GAME, PORTABLE, TUNER, TV AUDIO, SHIFT, BAND, TONE, SETARRIBA, CH LEVEL, VOLUME+, VOL+, VOLUME, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, BACK, SLEEP, MODE, TV/DTV, INFO, MEMORY, EPG, RESTORER, FAV, AUDIO, QUICK SELECT 1, QUICK SELECT 2, QUICK SELECT 3, QUICK SELECT 4, AUDIO DELAY+, VOL+, AUDIO DELAY, VOL, TUNE+, TUNE, SURROUND+, SURROUND, .