

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



/ AUDIO
DISC MENU
SEARCH
1/2/3/4/5
6/7/8/9/0
/ INPUT SELECT
CLEAR
DISPLAY
VARIABLE SKIP
SETUP
VARIABLE REPLAY
ADJUST+
ADJUST -
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
TIMER PROG.
REC MODE
DUBBING

TOP MNEU
CHAPTER MARK
OPEN / CLOSE
PAUSE
STOP
REC
REW
PLAY
FWD
VCR
HDD
DVD
SATELLITE LINK
MODE
1,3x / 0,8x / PLAY
AV SELECT
PROG+
PROG -
REPEAT
TIME SLIP

POWER, / AUDIO, MUTE, DISC MENU, MENU, SEARCH, EXIT, 1/2/3/4/5, 6/7/8/9/, 0 / INPUT SELECT, / SOURCE, CLEAR, DISPLAY, VARIABLE SKIP, SETARRIBA, VARIABLE REPLAY, ADJUST+, VOL+, ADJUST, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, TIMER PROG, SLEEP, REC MODE, TV/DTV, DUBBING, INFO, TOP MNEU, EPG, CHAPTER MARK, FAV, OPEN / CLOSE, / NET TV, PAUSE, STOP, / SMART, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, VCR, HDD, DVD, SATELLITE LINK, MODE, 13x / 08x / PLAY, AV SELECT, PROG+, PROG, REPEAT, TIME SLIP, .