

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTE
/ HOME
/ EXIT
1/2/3/4/5
6/7/8/9/0
3D SOUND
TITLE MENU / POPUP MNEU
/ TOOLS
DISC MENU
VOL+
VOL -
TUNING / CH+
TUNING / CH -
UP
DOWN
LEFT
RIGHT
/ RUTURN
SLEEP
S/W LEVEL
INFO
SOUND EFFECT
SMART HUB

RED / A
GREEN / B
YELLOW / C / TUNER MEM
BLUE / D / MO - ST
SEARCH
SKIP NEXT
SKIP PREV
EHECT
PAUSE
STOP
REW
PLAY
FWD

POWER, MUTE, / HOME, MENU, / EXIT, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 03D SOUND, TITLE MENU/POPARRIBA MNEU, / TOOLS, DISC MENU, VOL+, VOL, TUNING / CH+, TUNING / CH, ABAJO, IZQUIERDA, DERECHA, / RUTURN, BACK, SLEEP, S/W LEVEL, TV/DTV, INFO, SOUND EFFECT, FAV, SMART HUB, / SMART, ROJO / A, ROJO, VERDE / B, VERDE, AMARILLO / C / TUNER MEM, AMARILLO, AZUL / D / MO, AZUL, SEARCH, SKIP NEXT, SKIP PREV, EHECT, PAUSE, STOP, REW, PLAY, FWD,