

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
/ AUDIO
/ HOME
CLEAR
1/2/3/4/5
6/7/8/9/0
AV / INPUT
LIST / DISC MENU
DISPLAY
ZOOM
SHOWVIEW
/ SUBTITLE
*
*
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
... / RETURN
THUMBAIL
TV/VCR
TITLE

CHP ADD
MARKER
EJECT
PAUSE
STOP
REC
REW
PLAY
FWD
SEARCH
DVD
VCR
I.SKIP
DUBBING
REC MODE
PLAY MODE

POWER, / AUDIO, MUTE, / HOME, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0AV / INPUT, / SOURCE, LIST / DISC MENU, DISPLAY, ZOOM, SHOWVIEW, / SUBTITLE, VOL+, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, THUMBAIL, SLEEP, TV/VCR, TV/DTV, TITLE, INFO, CHP ADD, EPG, MARKER, FAV, EJECT, / NET TV, PAUSE, STOP, / SMART, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, SEARCH, DVD, VCR, ISKIP, DUBBING, REC MODE, PLAY MODE, .