

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER RECEIVER
MUTE
HOME / MENU
ECO
1/2/3/4/5
6/7/8/9/0
SPEAKERS
DIMMER / CLR / +10
DISPLAY
EQ
TOOLS MENU
MIDNIGHT
VOLUME +/-
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
... / RETURN
SLEEP
PHASE
SB CH
S. RETREIVER

SIGNAL SEL
PAUSE
STOP
REW
PLAY
FWD
AUDIO PARAMETER
ADAPTER
BD
CD
DVD
DVR / BDR
GAME
HDMI / MHL
IPOD / USB
NETWORK
SAT / CBL
TUNER
TV
CH LEV+
CH LEV -
PRESET -
PRESET+
CH SELECT
CH +/-

POWER RECEIVER, POWER, MUTE, HOME / MENU, MENU, ECO, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SPEAKERS, / SOURCE, DIMMER / CLR / +1, DISPLAY, TOOLS MENU, MIDNIGHT, VOLUME +/, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLEEP, PHASE, TV/DTV, SB CH, INFO, S RETREIVER, EPG, SIGNAL SEL, FAV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO PARAMETER, ADAPTER, DVD, DVR / BDR, GAME, HDMI / MHL, IPOD / USB, NETWORK, SAT / CBL, 0TUNER, CH LEV+, CH LEV, PRESET, PRESET+, CH SELECT, CH +/-, P+/, .