

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MENU
CLR
1/2/3/4/5
6/7/8/9/0
MODE
+10
DISPLAY
ASPECT / ZOOM
SETUP
SUBTITLE
VOL+
VOL -
PRESET / SKIP NEXT
PRESET / SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
SLEEP
RANDOM
LAST MEMORY

MEMORY
TOP MENU
PAUSE
STOP
REW / TUNING PREV
PLAY
FWD / TUNING NEXT
AUDIO
SEARCH
LISTENING MODE
SUBWOOFER LEVEL
ANGLE
RESOLUTION
INPUT+
INPUT -
REPEAT
A - B

POWER, MUTE, MENU, CLR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0MODE, / SOURCE, DISPLAY, ASPECT / ZOOM, SETARRIBA, SUBTITLE, VOL+, VOL, PRESET / SKIP NEXT, PRESET / SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, RANDOM, TV/DTV, LAST MEMORY, INFO, MEMORY, EPG, TOP MENU, FAV, PAUSE, STOP, / SMART, REW / TUNING PREV, VERDE, PLAY, AMARILLO, FWD / TUNING NEXT, AZUL, AUDIO, SEARCH, LISTENING MODE, SUBWOOFER LEVEL, ANGLE, RESOLUTION, INPUT+, INPUT, REPEAT, .