## **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando. El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto. Revise que localiza todas las funciones que necesita antes de realizar la compra.



1,7	VISUOL POWER
3	SOUND FIELD GENRE
Ī	SYSTEM OFF
	1/2/3/4/5
	6/7/8/9/0
s	OUND FIELD MDO
	DIRECT
	BASS BOOST
	TEST TONE
	EQ/TONE
	MASTER VOL+
	MASTER VOL -
	UP
	DOWN
	LEFT
	RIGHT
	DPC MODE
	SLEEP
5	OUND FIELD ON/OFF
	5.1 INPUT
	CD
	DAT/MD
	LD
	PHONO
	TAPE

TUNER	
TV	
VIDEO 1	
VIDEO 2	
VIDEO 3	
LEVEL CENTER	+
LEVEL CENTER	-
LEVEL REAR -	
LEVEL REAR+	
	_
	_
	_
	_
	_
	_

VISUOL POWER, POWER, SOUND FIELD GENRE, MENU, SYSTEM OFF, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOUND FIELD MDOE, / SOURCE, DIRECT, BASS BOOST, TEST TONE, EQ/TONE, MASTER VOL+, VOL+, MASTER VOL, VOL, ABAJO, IZQUIERDA, DERECHA, DPC MODE, SLEEP, SOUND FIELD ON/OFF, TV/DTV, 51 INPUT, DAT/MD, PHONO, TAPE, TUNER, VIDEO 1, VIDEO 2, 0VIDEO 3, LEVEL CENTER+, LEVEL CENTER, LEVEL REAR, LEVEL REAR+, .