

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY/ON
MUTE
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
DSP
>10
DVD DISPLAY
MONO
ANGLE
SUBTITLE
VOLUME+/-
SKIP NEXT/PREV
UP
DOWN
LEFT
RIGHT
ENTER
/ RETURN
SLEEP
RANDOM
FL DIMMER
PROGRAM
TOP MENU

OPEN/CLOSE
STOP
REW
PLAY/PAUSE
FWD
AUDIO
SYSTEM SETUP
DISC SKIP
DISC 1
DISC 2
DISC 3
DISC 4
DISC 5
DVD/CD
TUNER/BAND
TV/AUX
CD MODE
TEST TONE
SURROUND MDOE
CH LEVEL
DVD SETUP
SOUND MODE
REPEAT
REP A – B
LAST MEMO

STANDBY/ON, POWER, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0DSP, / SOURCE, DVD DISPLAY, MONO, ANGLE, SUBTITLE, VOLUME, VOL, SKIP NEXT/PREV, P+/, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLEEP, RANDOM, TV/DTV, FL DIMMER, INFO, PROGRAM, EPG, TOP MENU, FAV, OPEN/CLOSE, / NET TV, STOP, / SMART, REW, VERDE, PLAY/PAUSE, AMARILLO, FWD, AZUL, AUDIO, SYSTEM SETARRIBA, DISC SKIP, DISC 1, DISC 2, DISC 3, DISC 4, DISC 5, DVD/CD, TUNER/BAND, TV/AUX, CD MODE, TEST TONE, SURROUND MDOE, CH LEVEL, DVD SETARRIBA, SOUND MODE, REPEAT, REP A, LAST MEMO, .