

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTING
SYSTEM STANDBY
1/2/3/4/5
6/7/8/9/0
SHIFT / >10 / -/--
EQ/TONE ON/OFF
MASTER VOLUME+
MASTER VOLUME -
CH/PRESET+
CH/PRESET -
UP
DOWN
LEFT
RIGHT
TEST TONE
SLEEP
2CH/OFF
BASS BOOST
CURSOR MODE
A.F.D.
5.1 CH
CD
DVD
MD

PHONO
TAPE
TUNER
TV
VIDEO 1
VIDEO 2
VIDEO 3
LEVEL CENTER+
LEVEL CENTER -
LEVEL REAR+
LEVEL REAR -
MODE+
MODE -

POWER, MUTING, MUTE, SYSTEM STANDBY, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SHIFT / x, 10 /, EQ/TONE ON/OFF, MASTER VOLUME+, VOL+, MASTER VOLUME, VOL, CH/PRESET+, CH/PRESET, ABAJO, IZQUIERDA, DERECHA, TEST TONE, BACK, SLEEP, 2CH/OFF, TV/DTV, BASS BOOST, INFO, CURSOR MODE, EPG, AFD, FAV, 51 CH, DVD, PHONO, TAPE, TUNER, VIDEO 1, VIDEO 2, 0VIDEO 3, LEVEL CENTER+, VOL+, LEVEL CENTER, SHFIT+ VOL, LEVEL REAR+, LEVEL REAR, MODE+, MODE, .