

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>SYSTEM POWER</b>
<b>MUTE</b>
<b>MENU</b>
<b>TEST TONE</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>FUNCTION</b>
<b>TIMER / CLOCK ADJ</b>
<b>DISP</b>
<b>MIDNIGHT</b>
<b>SETUP</b>
<b>SUBTITLE</b>
<b>SYSTEM VOLUME+</b>
<b>SYSTEM VOLUME -</b>
<b>SKIP NEXT</b>
<b>SKIP PREV</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>
<b>ENTER</b>
<b>/ RETURN</b>
<b>SLEEP</b>
<b>STATION MEMORY</b>
<b>FL DIMMER</b>

<b>CH SELECT</b>
<b>TOP MNEU</b>
<b>PAUSE</b>
<b>STOP</b>
<b>REW</b>
<b>PLAY</b>
<b>FWD</b>
<b>AUDIO</b>
<b>RDM</b>
<b>SOUND CONTROL</b>
<b>AUDIO 1</b>
<b>AUDIO 2</b>
<b>DVD</b>
<b>TUN</b>
<b>VIDEO 1</b>
<b>VIDEO 2</b>
<b>BAND</b>
<b>P.BASS</b>
<b>DSP</b>
<b>DTS</b>
<b>CH+</b>
<b>CH -</b>
<b>FQ+</b>
<b>FQ -</b>
<b>REPEAT</b>

SYSTEM POWER, POWER, MUTE, MENU, TEST TONE, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0FUNCTION, / SOURCE, TIMER / CLOCK ADJ, DISP, MIDNIGHT, SETARRIBA, SUBTITLE, SYSTEM VOLUME+, VOL, SYSTEM VOLUME, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLEEP, STATION MEMORY, TV/DTV, FL DIMMER, INFO, CH SELECT, EPG, TOP MNEU, FAV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, RDM, SOUND CONTROL, AUDIO 1, AUDIO 2, DVD, TUN, VIDEO 1, VIDEO 2, BAND, PBASS, DSP, DTS, CH+, FQ+, REPEAT, .