

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
PTY
DISPLAY
ZOOM
SETUP
/ SUBTITLE
VOLUME+/-
SKIP NEXT/PREV
UP
DOWN
LEFT
RIGHT
ENTER/SELECT
/ RETURN
SLEEP
RDS
DIMMER
PROG/MEMO
MARKER
PAUSE/STEP

STOP
REW
PLAY
FWD
/ AUDIO
SEARCH
AUX
DVD
TUNER/BAND
USB
DISP MODE
SOUND MODE
EQ MASTER
VSM
ECHO VOL+
ECHO VOL -
MIC VOL -
MIC VOL+
REPEAT
REPEAT A - B
TITLE
XDSS Plus
XTS pro
SLOW -
SLOW+

POWER, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0PTY, DISPLAY, ZOOM, SETARRIBA, / SUBTITLE, VOLUME+/, VOL, SKIP NEXT/PREV, P+/, ABAJO, IZQUIERDA, DERECHA, ENTER/SELECT, / RETURN, BACK, SLEEP, RDS, TV/DTV, DIMMER, INFO, PROG/MEMO, EPG, MARKER, FAV, PAUSE/STEP, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, / AUDIO, SEARCH, AUX, DVD, TUNER/BAND, USB, DISP MODE, SOUND MODE, EQ MASTER, VSM, ECHO VOL+, ECHO VOL, MIC VOL, MIC VOL+, REPEAT, REPEAT A, TITLE, XDSS Plus, XTS pro, SLOW, SLOW+, .