

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.  
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.  
 Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>ON / STAND - BY</b>
<b>[Mute]</b>
<b>IPOD MENU</b>
<b>CLEAR</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>+10</b>
<b>CD/USB DISPLAY</b>
<b>BASS/TREBLE</b>
<b>RDS/PTY</b>
<b>IPOD DISPLAY</b>
<b>VOL+</b>
<b>VOL -</b>
<b>TUNING+</b>
<b>TUNING -</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>
<b>ENTER</b>
<b>[Repeat]</b>
<b>SLEEP</b>
<b>X - BASS</b>
<b>DEMO/DIMMER</b>
<b>MEMORY</b>

<b>FOLDER</b>
<b>OPEN/CLOSE</b>
<b>IPOD PLAY/PAUSE</b>
<b>CD/USB STOP</b>
<b>REW / SKIP PREV</b>
<b>CD/USB PLAY/PAUSE</b>
<b>FWD / SKIP NEXT</b>
<b>RANDOM</b>
<b>INPUT / AUDIO LINE</b>
<b>CD</b>
<b>IPOD</b>
<b>TUNER</b>
<b>USB</b>
<b>RDS DISPLAY</b>
<b>RDS ASPM</b>
<b>RDS/PTY</b>

ON / STAND, POWER, MUTE, IPOD MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0+1, CD/USB, DISPLAY, BASS/TREBLE, RDS/PTY, IPOD DISPLAY, VOL+, VOL, TUNING+, TUNING, ABAJO, IZQUIERDA, DERECHA, ENTER, / REPEAT, BACK, SLEEP, BASS, TV/DTV, DEMO/DIMMER, INFO, MEMORY, EPG, FOLDER, FAV, OPEN/CLOSE, / NET TV, IPOD PLAY/PAUSE, CD/USB STOP, / SMART, REW / SKIP PREV, VERDE, /USB PLAY, /PAUSE, AMARILLO, FWD / SKIP NEXT, AZUL, RANDOM, INPUT / AUDIO LINE, IPOD, TUNER, USB, RDS DISPLAY, RDS ASPM, .