

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



ON/OFF
MUTING
USER
SKIP/C
1/2/3/4/5
6/7/8/9/0
SOURCE
ANT A/B
WID/NAR
MO/ST
FLAT
ATTEN
VOLUME+
VOLUME -
SKIP NEXT
SKIP PREV
TREBLE R
TREBLE L
BASS L
BASS R
STORE
REPEAT
LOUDN
AM/FM
---

PROG
PRE
---
PAUSE
STOP
RECORD
REW
PLAY
FWD
OFF
CD
MM
MC
TUNER
DAT
TAPE
VIDEO
AUX
SP A
SP B
BALANCE L
BALANCE R
RECORD

ON/OFF, POWER, MUTING, MUTE, USER, MENU, SKIP/C, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, ANT A/B, WID/NAR, MO/ST, FLAT, ATTN, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, TREBLE R, TREBLE L, ABAJO, BASS L, IZQUIERDA, BASS R, DERECHA, STORE, REPEAT, BACK, LOUDN, SLEEP, AM/FM, TV/DTV, INFO, PROG, EPG, PRE, FAV, / NET TV, PAUSE, STOP, / SMART, RECORD, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, OFF, TUNER, DAT, TAPE, VIDEO, AUX, SP A, SP B, BALANCE L, SIFT+IZQUIERDA, BALANCE R, .