

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
OPTION
EXIT / ECO
CBL/SAT
DVD
BLU -- RAY
GAME
AUX 1
MEDIA PLAYER
TV AUDIO
AUX 2
TUNER
IPOD/USB
CD
BLUETOOTH
SETUP
VOLUME+
VOLUME -
SKIP NEXT / TUNE+
SKIP PREV / TUNE -
UP
DOWN
LEFT
RIGHT

ENTER
BACK
SLEEP
PHONO
INFO
ONLINE MUSIC
INTERNET RADIO
PLAY/PAUSE
SMART SELECTOR 1
SMART SELECTOR 2
SMART SELECTOR 3
SMART SELECTOR 4
CH/PAGE+
CH/PAGE -
RED / MUSIC
GREEN / MOVIE
YELLOW / PURE
BLUE / GAME

POWER, MUTE, OPTION, MENU, / ECO, EXIT, CBL/SAT, DVD, BLU, RAY, GAME, AUX 1, MEDIA PLAYER, TV AUDIO, AUX 2, TUNER, IPOD/USB, 0CD, / SOURCE, AZULTOOTH, SETARRIBA, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT / TUNE+, SKIP PREV / TUNE, ABAJO, IZQUIERDA, DERECHA, ENTER, BACK, SLEEP, PHONO, TV/DTV, INFO, ONLINE MUSIC, / NET TV, INTERNET RADIO, / SMART, PLAY/PAUSE, AMARILLO, SMART SELECTOR 1, SMART SELECTOR 2, SMART SELECTOR 3, SMART SELECTOR 4, CH/PAGE+, CH/PAGE, ROJO / MUSIC, ROJO, VERDE / MOVIE, VERDE, AMARILLO / PURE, AZUL / GAME, AZUL, .