

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
DISPLAY
ZOOM
SET UP
[] / S - TITLE
VOLUME +
VOLUME -
SKIP/SCAN +
SKIP/SCAN -
UP
DOWN
LEFT
RIGHT
ENTER
[] / RETURN
SLEEP
SOUND
RDS
PROGRAM
MARKER

OPEN / CLOSE
PAUSE / STEP
STOP
REW / SLOW SCAN -
PLAY
FWD / SLOW SCAN +
[] / AUDIO
SEARCH
CD / DVD
BAND
AUX
DIMMER
ANGLE
PRESET +
PRESET -
REPEAT
REPEAT A - B
TITLE
PTY
PTY SEARCH

POWER, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0DISPLAY, ZOOM, SET ARRIBA, / S, TITLE, VOLUME +, VOL +, VOLUME, VOL, SKIP/SCAN +, SKIP/SCAN, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLEEP, SOUND, TV/DTV, RDS, INFO, PROGRAM, EPG, MARKER, FAV, OPEN / CLOSE, / NET TV, PAUSE / STEP, STOP, / SMART, REW / SLOW SCAN, VERDE, PLAY, AMARILLO, FWD / SLOW SCAN +, AZUL, / AUDIO, SEARCH, / DVD, BAND, AUX, DIMMER, ANGLE, PRESET +, P +, PRESET, REPEAT, REPEAT A, TITLE, PTY, PTY SEARCH, .