

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>POWER</b>
<b>MODE</b>
<b>EXIT</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>ADLC</b>
<b>+10</b>
<b>DISPLAY</b>
<b>TRACK SET</b>
<b>HI LITE SCAN</b>
<b>+20</b>
<b>SKIP NEXT</b>
<b>SKIP PREV</b>
<b>OUTPUT+</b>
<b>OUTPUT -</b>
<b>DISC PREV</b>
<b>DISC NEXT</b>
<b>DISC SET</b>
<b>REPEAT</b>
<b>TIME/CHAR</b>
<b>RANDOM PLAY</b>
<b>CHECK</b>
<b>PGM</b>
<b>BEST</b>
<b>OPEN/CLOSE</b>

<b>PAUSE</b>
<b>STOP</b>
<b>REW</b>
<b>PLAY</b>
<b>FWD</b>
<b>SEARCH</b>
<b>DISC 1</b>
<b>DISC 2</b>
<b>DISC 3</b>
<b>DISC 4</b>
<b>DISC 5</b>
<b>DISC 6</b>
<b>MAGAZINE 1</b>
<b>MAGAZINE 2</b>
<b>MAGAZINE 3</b>
<b>CLEAR</b>

POWER, MODE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0ADLC, / SOURCE, DISPLAY, TRACK SET, HI LITE SCAN, 0SKIP NEXT, SKIP PREV, OUTPUT+, OUTPUT, ABAJO, DISC PREV, IZQUIERDA, DISC NEXT, DERECHA, DISC SET, REPEAT, BACK, TIME/CHAR, SLEEP, RANDOM PLAY, TV/DTV, CHECK, INFO, PGM, EPG, BEST, FAV, OPEN/CLOSE, / NET TV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, SEARCH, DISC 1, DISC 2, DISC 3, DISC 4, DISC 5, DISC 6, MAGAZINE 1, MAGAZINE 2, MAGAZINE 3, CLEAR, .