

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER OFF
1/2/3/4/5
6/7/8/9/0
-20 db
MONITOR
VOLUME+
VOLUME -
SCAN/STATION >
< SCAN/STATION
BASS+
BASS -
TREBLE -
TREBLE+
ENTER
PRE - OUT
TONE
REC = MON
P - TYPE
P/NEXT
PAUSE/TIME
STOP/EXIT
REW/EVENT
PLAY/TEST
FWD/SELECT
TUNET TV

TAPE/VCR 1
TAPE/VCR 2
AUX
CD DISC
PHONO
BALANCE R
BALANCE L
SPEAKERS A
SPEAKERS B
◀
▶
▼ / ▲

POWER OFF, POWER, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 020, MONITOR, VOLUME+, VOL+, VOLUME, VOL, SCAN/STATION x, SCAN/STATION, BASS+, BASS, ABAJO, TREBLE, IZQUIERDA, TREBLE+, DERECHA, ENTER, PRE, OUT, BACK, TONE, TV/DTV, REC MON, INFO, TYPE, EPG, P/NEXT, FAV, PAUSE/TIME, STOP/EXIT, / SMART, REW/EVENT, VERDE, PLAY/TEST, AMARILLO, FWD/SELECT, AZUL, TUNET TV, TAPE/VCR 1, TAPE/VCR 2, AUX, CD DISC, PHONO, BALANCE R, VOL+, BALANCE L, VOL, SPEAKERS A, SPEAKERS B, .