

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER ON
AUDIO
POP UP MENU/MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
MODE
HDMI RESOLUTION
DISPLAY
ZOOM
SETUP
SUBTITLE
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
PURE DIRECT
RANDOM
DIMMER
ANGLE
TOP MENU

OPEN/CLOSE
PAUSE
STOP
REW
PLAY
FWD
POWER OFF
SEARCH
REPEAT
REPEAT A - B
RED
GREEN
YELLOW
BLUE

POWER ON, POWER, AUDIO, MUTE, POP ARRIBA MENU/MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0MODE, / SOURCE, HDMI RESOLUTION, DISPLAY, ZOOM, SETARRIBA, SUBTITLE, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, PURE DIRECT, SLEEP, RANDOM, TV/DTV, DIMMER, INFO, ANGLE, EPG, TOP MENU, FAV, OPEN/CLOSE, / NET TV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, POWER OFF, SEARCH, REPEAT, REPEAT A, ROJO, .