


FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
 Revise que localiza todas las funciones que necesita antes de realizar la compra.


MUTING
MENU/PL
TITLE DELETE
1/2/3/4/5
6/7/8/9/0
+10
DISPLAY
ZOOM
SEYUP
SUBTITLE
VOL+
VOL-
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
SLEEP
SCAN MODE
DIMMER
TOP MENU/PG

ON SCREEN
EJECT
PAUSE
STOP
REC
REW
PLAY
FWD
AUDIO
AUDIO IN
DIGITAL IN
DVD
TUNER
USB
10
GROUP/TITLE
TREBLE/BASS
VFP
LEVEL+
LEVEL-
CH+
CH-
PRESET PREV
PRESET NEXT
REPEAT

SURROUND
TV/VIDEO
SPEAKER LEVEL
PLAY MODE

POWER, MUTING, MUTE, MENU/PL, MENU, TITLE DELETE, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0+1, DISPLAY, ZOOM, SEYARRIBA, SUBTITLE, VOL+, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, SCAN MODE, TV/DTV, DIMMER, INFO, TOP MENU/PG, EPG, ON SCREEN, FAV, EJECT, / NET TV, PAUSE, STOP, / SMART, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, AUDIO IN, DIGITAL IN, DVD, TUNER, USB, 00GROARRIBA/TITLE, TREBLE/BASS, VFP, LEVEL+, VOL+, LEVEL, VOL, CH+, PRESET PREV, PRESET NEXT, REPEAT, SURROUND, TV/VIDEO, SPEAKER LEVEL, PLAY MODE, SHFIT+FAV, .