

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MAIN POWER ON
MUTE
3 ST
AC - 3
1/2/3/4/5
6/7/8/9/0
P/L
DISPLAY
HALL
MATRIX
MOVIE
VOLUME+
VOLUME -
TUNER/SEARCH+
TUNER/SEARCH -
UP
DOWN
LEFT
RIGHT
SELECT
DELAY
SLEEP
STEREO
MULTI
MEM

CH SELECT
NIGHT
OSD
TEST
MAIN POWER OFF
CD
COAX
DVD
OPT
RF
TAPE 1
TAPE 2
AM/FM
TV
VID 1
VID 2
VID 3
SPEAKER+
SPEAKER -
PRESET DISC+
PRESET DISC -

MAIN POWER ON, POWER, MUTE, 3 ST, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0P/L, DISPLAY, HALL, MATRIX, MOVIE, VOLUME+, VOL+, VOLUME, VOL, TUNER/SEARCH+, TUNER/SEARCH, ABAJO, IZQUIERDA, DERECHA, SELECT, DELAY, BACK, SLEEP, STEREO, TV/DTV, MULTI, INFO, MEM, EPG, CH SELECT, FAV, NIGHT, / NET TV, OSD, TEST, / SMART, MAIN POWER OFF, COAX, DVD, OPT, TAPE 1, TAPE 2, AM/FM, VID 1, 0VID 2, VID 3, SPEAKER+, VOL+, SPEAKER, VOL, PRESET DISC+, PRESET DISC, .