

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
 Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTING
TAPE 1
TAPE 2
CD
PHONO
TUNER
VIDEO 1
VIDEO 2
VIDEO 3
MULTI SOURCE
DISC
VOLUME UP
VOLUME DOWN
CD SKIP NEXT
CD SKIP PREV
REAR LEVEL UP
REAR LEVEL DOWN
CENTER LEVEL DOWN
CENTER LEVEL UP
TEST
DELAY TIME
SLEEP
SURROUND MODE
CLASS PRESET

SPEAKER REMOTE
SPEAKERS MAIN
CD PAUSE
CD STOP
CD REW
CD PLAY
CD FWD
DECK B REV PLAY
TUNER UP
TUNER DOWN
DECK B PLAY
DECK B STOP
DECK B REW
DECK B FWD
DECK B PAUSE
DECK A REV PLAY
DECK A PAUSE
DECK A STOP
DECK A REW
DECK A PLAY
DECK A FWD

POWER, MUTING, MUTE, TAPE 1, TAPE 2, PHONO, TUNER, VIDEO 1, VIDEO 2, VIDEO 3, MULTI SOURCE, / SOURCE, DISC, VOLUME ARRIBA, VOL+, VOLUME ABAJO, VOL, CD SKIP NEXT, CD SKIP PREV, REAR LEVEL ARRIBA, REAR LEVEL ABAJO, ABAJO, CENTER LEVEL ABAJO, IZQUIERDA, CENTER LEVEL ARRIBA, DERECHA, TEST, DELAY TIME, BACK, SLEEP, SURROUND MODE, TV/DTV, CLASS PRESET, INFO, SPEAKER REMOTE, EPG, SPEAKERS MAIN, FAV, CD PAUSE, CD STOP, / SMART, CD REW, VERDE, CD PLAY, AMARILLO, CD FWD, AZUL, DECK B REV PLAY, VOL, TUNER ARRIBA, TUNER ABAJO, DECK B PLAY, DECK B STOP, DECK B REW, DECK B FWD, DECK B PAUSE, DECK A REV PLAY, DECK A PAUSE, DECK A STOP, DECK A REW, DECK A PLAY, DECK A FWD, .