

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



RECEIVER ON
MUTE
MENU
STRAIGHT DECODE
1/2/3/4/5
6/7/8/9/0
+10
DISPLAY
ACTIVE EQ
SETUP
ON SCREEN/AUTO MEM
VOLUME +
VOLUME -
TUNING+
TUNING -
MULTI CONTROL ▲
MULTI CONTROL ▼
MULTI CONTROL ◀
MULTI CONTROL ▶
PURE AUDIO MODE
RETURN
TIME
AUTO/MONO
DIMMER
MEMORY

TOP MENU
BAND
BASS BOOST
SOUND
TONE
RECEIVER STANDBY
AUDIO/PTY
AUX
AV AUX
CD
DVD
IPOD
MD/TAPE
TUNER
VIDEO 1
VIDEO 2
< LISTE MODE
LISTEN MODE >

RECEIVER ON, POWER, MUTE, MENU, STRAIGHT DECODE, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0+1, DISPLAY, ACTIVE EQ, SETARRIBA, ON SCREEN/AUTO MEM, VOLUME+, VOL+, VOLUME, VOL, TUNING+, TUNING, MULTI CONTROL, ABAJO, IZQUIERDA, DERECHA, PURE AUDIO MODE, RETURN, BACK, TIME, SLEEP, AUTO/MONO, TV/DTV, DIMMER, INFO, MEMORY, EPG, TOP MENU, FAV, BAND, ROJO, BASS BOOST, VERDE, SOUND, AMARILLO, TONE, AZUL, RECEIVER STANDBY, AUDIO/PTY, AUX, AV AUX, DVD, IPOD, MD/TAPE, TUNER, VIDEO 1, VIDEO 2, LISTE MODE, LISTEN MODE x, .