

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTE
POP – UP/MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
HOME
DISPLAY
ON SCREEN
SETUP
SUBTITLE
VOLUME+
VOLUME -
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
SLEEP
SHUFFLE
DIMMER
MEMORY
TOP MENU
RED/PROGRAM

GREEN/MARKER
YELLOW/ZOOM
BLUE/DIGEST
AUDIO
SEARCH
AUX
DISC
IPOD
PORTABLE
STB
TUNER
TV
PIP
STATUS
SW+/-
SKIP NEXT
SKIP PREV
REPEAT
A – B
EJECT
PAUSE
STOP
REW
PLAY
FWD

POWER, MUTE, POP, ARRIBA/MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0HOME, DISPLAY, ON SCREEN, SETARRIBA, SUBTITLE, VOLUME+, VOL+, VOLUME, VOL, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, SHUFFLE, TV/DTV, DIMMER, INFO, MEMORY, EPG, TOP MENU, FAV, ROJO/PROGRAM, ROJO, VERDE/MARKER, VERDE, AMARILLO/ZOOM, AMARILLO, AZUL/DIGEST, AZUL, AUDIO, SEARCH, AUX, DISC, IPOD, PORTABLE, STB, TUNER, PIP, STATUS, SW+/, VOL+/, SKIP NEXT, SKIP PREV, REPEAT, EJECT, PAUSE, STOP, REW, PLAY, FWD, .