

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.

|                           |
|---------------------------|
| <b>POWER ON</b>           |
| <b>MUTE</b>               |
| <b>MENU</b>               |
| <b>SHIFT</b>              |
| <b>1/2/3/4/5</b>          |
| <b>6/7/8/9/0</b>          |
| <b>SOURCE SELECT</b>      |
| <b>+10</b>                |
| <b>MONITOR SELECT</b>     |
| <b>MULTEQ</b>             |
| <b>SETUP/SEARCH</b>       |
| <b>DYN EQ/VOL</b>         |
| <b>VOL+</b>               |
| <b>VOL -</b>              |
| <b>SKIP NEXT/TUNING+</b>  |
| <b>SKIP PREV/TUNING -</b> |
| <b>UP</b>                 |
| <b>DOWN</b>               |
| <b>LEFT</b>               |
| <b>RIGHT</b>              |
| <b>ENTER</b>              |
| <b>RETURN</b>             |
| <b>SLEEP</b>              |
| <b>NET/USB</b>            |
| <b>A – DSX</b>            |

|                              |
|------------------------------|
| <b>MEMORY/PARTY</b>          |
| <b>TOP MENU/CH LEVEL</b>     |
| <b>PAUSE</b>                 |
| <b>STOP</b>                  |
| <b>REW/BAND</b>              |
| <b>PLAY</b>                  |
| <b>FWD/MODE</b>              |
| <b>POWER OFF</b>             |
| <b>ZONE/DEVICE ON</b>        |
| <b>ZONE/DEVICE OFF</b>       |
| <b>DVD</b>                   |
| <b>BD</b>                    |
| <b>TUNER</b>                 |
| <b>DOCK</b>                  |
| <b>SAT TU</b>                |
| <b>SAT/CBL</b>               |
| <b>GAME</b>                  |
| <b>V.AUX</b>                 |
| <b>PHONO</b>                 |
| <b>CD</b>                    |
| <b>DVR</b>                   |
| <b>TV</b>                    |
| <b>QUICK SEL 1 (BD)</b>      |
| <b>QUICK SEL 2 (SAT/CBL)</b> |
| <b>QUICK SEL 3 (DOCK)</b>    |

|                   |
|-------------------|
| <b>RESTORER</b>   |
| <b>STANDARD</b>   |
| <b>D/ST</b>       |
| <b>SIMULATION</b> |
| <b>PURE</b>       |
| <b>IPOD PLAY</b>  |
|                   |
|                   |
|                   |
|                   |
|                   |
|                   |
|                   |
|                   |
|                   |
|                   |
|                   |
|                   |
|                   |
|                   |
|                   |
|                   |
|                   |
|                   |

POWER ON, POWER, MUTE, MENU, SHIFT, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE SELECT, / SOURCE, MONITOR SELECT, MULTEQ, SETARRIBA/SEARCH, DYN EQ/VOL, VOL+, VOL-, SKIP NEXT/TUNING+, SKIP PREV/TUNING, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, NET/USB, TV/DTV, DSX, INFO, MEMORY/PARTY, EPG, TOP MENU/CH LEVEL, FAV, PAUSE, STOP, / SMART, REW/BAND, VERDE, PLAY, AMARILLO, FWD/MODE, AZUL, POWER OFF, ZONE/DEVICE ON, ZONE/DEVICE OFF, DVD, TUNER, DOCK, SAT TU, SAT/CBL, GAME, VAUX, PHONO, 0DVR, QUICK SEL, 1 BD, QUICK SEL 2 SAT/CBL, QUICK SEL 3 DOCK, RESTORER, STANDARD, D/ST, SIMULATION, PURE, IPOD PLAY, .