

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY
MUTE
MENU
ECHO
1/2/3/4/5
6/7/8/9/0
SOURCE
10+
OSD
GOTO
SETUP
SUBTITLE
VOL+
VOL -
SKIP NEXT/CH+
SKIP PREV/CH -
UP
DOWN
LEFT
RIGHT
ENTER
REPEAT
SLOW
TV - MODE
TITLE

PROG
A - B
OPEN/CLOSE
STOP
REW/FINE -
PLAY/PAUSE
FWD/FINE+
AUDIO
AUTO SEARCH
USB
CH LEVEL
V - MODE
ZOOM
ANGLE
S - EFFECT
tone
MO/ST

STANDBY, POWER, MUTE, MENU, ECHO, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, 10+, OSD, GOTO, SETARRIBA, SUBTITLE, VOL+, VOL, SKIP NEXT/CH+, SKIP PREV/CH, ABAJO, IZQUIERDA, DERECHA, ENTER, REPEAT, BACK, SLOW, SLEEP, MODE, TV/DTV, TITLE, INFO, PROG, EPG, FAV, OPEN/CLOSE, / NET TV, STOP, / SMART, REW/FINE, VERDE, PLAY/PAUSE, AMARILLO, FWD/FINE+, AZUL, AUDIO, AUTO SEARCH, USB, CH LEVEL, ZOOM, ANGLE, EFFECT, TONE, MO/ST, .