

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
 Revise que localiza todas las funciones que necesita antes de realizar la compra.



CD 1/2/3/4/5
CD 6/7/8/9/10
CD +10
SEA MODE
SEA PRESET
LIVE S
VOLUME +
VOLUME -
CD SKIP NEXT
CD SKIP PREV
DECK A FWD
DECK A REW
DECK A PLAY REV
DECK A PLAY
DECK A STOP
PROGRAM
CD STOP
CD PLAY
TUNER 1/2/3/4/5
TUNER 6/7/8/9/0
TUNER +10
TUNER
AUX

PHONO
DECK B PLAY REV
DECK B STOP
DECK B REC/PAUSE
DECK B REW
DECK B PLAY
DECK B FWD

POWER, MUTE, CD 1/2/3/4/5, 1/2/3/4/5, CD 6/7/8/9/1, 06/7/8/9/, 0CD +1, SEA MODE, SEA PRESET, LIVE S, VOLUME+, VOL+, VOLUME, VOL, CD SKIP NEXT, CD SKIP PREV, DECK A FWD, DECK A REW, ABAJO, DECK A PLAY REV, IZQUIERDA, DECK A PLAY, DERECHA, DECK A STOP, PROGRAM, EPG, CD STOP, / SMART, CD PLAY, AMARILLO, TUNER 1/2/3/4/5, TUNER 6/7/8/9/, 0TUNER +1, TUNER, AUX, PHONO, DECK B PLAY REV, BACK, DECK B STOP, DECK B REC/PAUSE, ROJO, DECK B REW, VERDE, DECK B PLAY, DECK B FWD, AZUL, .