

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY / ON
MUTING
PROGRAM
CLEAR
1/2/3/4/5
6/7/8/9/0
FUNCTION
SHUFFLE
DISPLAY
AUTO TUNE
BAND
DIMMER
VOLUME+
VOLUME -
SKIP NEXT
SKIP PREV
FOLDER+
FOLDER -
FILE -
FILE+
REC MODE
SLEEP
TUNER ENTER
INFO / RDS
MEMORY

USB ENTER
PAUSE
STOP
REC
REW
PLAY
FWD
TIMER
AUX 1
AUX 2
AUX 3
CD
TAPE
TUNER
USB
TIME
PRESET+
PRESET -
REPEAT 1 / ALL
REPEAT A - B

STANDBY / ON, POWER, MUTING, MUTE, PROGRAM, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0FUNCTION, SOURCE, SHUFFLE, DISPLAY, AUTO TUNE, BAND, DIMMER, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP, PREV, FOLDER+, FOLDER, ABAJO, FILE, IZQUIERDA, FILE+, DERECHA, REC MODE, SLEEP, TUNER ENTER, TV/DTV, INFO / RDS, INFO, MEMORY, EPG, USB ENTER, FAV, PAUSE, STOP, / SMART, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, TIMER, AUX 1, AUX 2, AUX 3, TAPE, TUNER, USB, TIME, PRESET+, PRESET, REPEAT 1 / ALL, BACK, REPEAT A, .