

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
INPUT
-/--
HOME
HOLD
SIZE
TTX
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
OK / CH LIST
RECALL
SLEEP
TV/RADIO
INFO

EPG
FAV / GOTO
BROWSER
RED
GREEN
YELLOW
BLUE
NICAM
DEL
REVEAL
ZOOM
S.PAGE
SUBTITLE
SKIP NEXT
SKIP PREV
T.SHIFT
P.MODE
PVR LIST
INDEX
S.MODE
STOP
REC
REW
PLAY/PAUSE
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT, / SOURCE, HOME, HOLD, SIZE, TTX, VOL+, VOL-, CH+, ABAJO, IZQUIERDA, DERECHA, OK / CH LIST, RECALL, BACK, SLEEP, TV/RADIO, TV/DTV, INFO, EPG, FAV / GOTO, FAV, BROWSER, / SMART, ROJO, VERDE, AMARILLO, AZUL, NICAM, DEL, REVEAL, ZOOM, SPAGE, SUBTITLE, SKIP NEXT, SKIP PREV, TSHIFT, PMODE, PVR LIST, INDEX, SMODE, STOP, REC, REW, PLAY/PAUSE, FWD, .