

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
CANCEL
1/2/3/4/5
6/7/8/9/0
AUX
ANGLE
DISPLAY
ZOOM
SETUP
[Icon] / SUBTITLE
VOLUME+
VOLUME-
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
ENTER
[Icon] / RETURN
SLEEP
CD / DVD
TITLE

PROGRAM
MARKER
OPEN / CLOSE
PAUSE
STOP
REW / SLO-
PLAY
FWD / SLOW+
[Icon] / AUDIO
SEARCH
SOUND MODE
BAND
DPL II
RDS
PRESET+
PRESET-
REPEAT A-B
DIMMER
PTY
PTY SEACH

POWER, MUTE, MENU, CANCEL, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0AUX, / AV, ANGLE, DISPLAY, ZOOM, SETARRIBA, / SUBTITLE, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLEEP, CD / DVD, TV/DTV, TITLE, INFO, PROGRAM, EPG, MARKER, FAV, OPEN / CLOSE, PAUSE, STOP, REW / SLO, VERDE, PLAY, AMARILLO, FWD / SLOW+, AZUL, / AUDIO, SEARCH, SOUND MODE, BAND, DPL II, RDS, PRESET+, PRESET, REPEAT A, DIMMER, PTY, PTY SEACH, .