

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
 Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER ON
AUDIO
POPUP MENU / MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
MODE
DISPLAY
ZOOM
SETUP
SUBTITLE
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
PURE DIRECT
RANDOM
DIMMER
TOP MENU
SEARCH MODE
OPEN/CLOSE

PAUSE
STOP
REW
PLAY
FWD
POWER OFF
REPEAT
ANGLE
REPEAT A – B
RED
GREEN
YELLOW
BLUE

POWER ON, POWER, AUDIO, MUTE, POPARRIBA MENU / MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0MODE, DISPLAY, ZOOM, SETARRIBA, SUBTITLE, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, PURE DIRECT, SLEEP, RANDOM, TV/DTV, DIMMER, INFO, TOP MENU, EPG, SEARCH MODE, FAV, OPEN/CLOSE, / NET TV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, POWER OFF, REPEAT, SIFT+BACK, ANGLE, REPEAT A, ROJO, .