

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTE
DISC MENU
/ EXIT
1 / RDS DISPLAY
2
3 / TA
4 / PTY -
5 / PTY SEARCH
6 / PTY+
7/8/9/0
FUNCTION
/ HOME
FULL SCREEN
POPUP/TITLE MENU
/ TOOLS
SUBTITLE
VOL+
VOL -
TUNING/CH+
TUNING/CH -
UP
DOWN
LEFT
RIGHT

/ RETURN
SLEEP
/ TV SOUND
INFO
3D SOUND
S/W LEVEL
SMART HUB
RED/A
GREEN/B
YELLOW/C/TUN MEMORY
BLUE/D/MO-ST
AUDIO
SEARCH
SKIP NEXT
SKIP PREV
REPEAT
MANUAL/PRESET
SOUND EFFECT
EJECT
PAUSE
STOP
REW
PLAY
FWD

POWER, MUTE, DISC MENU, MENU, / EXIT, EXIT, 1 / RDS DISPLAY, 3 / TA, 4 / PTY, 5 / PTY SEARCH, 6 / PTY+, 7/8/9/, 0/FUNCTION, / SOURCE, / HOME, FULL SCREEN, POPARRIBA/TITLE MENU, / TOOLS, SUBTITLE, VOL+, VOL, TUNING/CH+, TUNING/CH, ABAJO, IZQUIERDA, DERECHA, / RETURN, BACK, SLEEP, / TV SOUND, TV/DTV, INFO, 3D SOUND, EPG, S/W LEVEL, FAV, SMART HUB, / SMART, ROJO/A, ROJO, VERDE/B, VERDE, AMARILLO/C/TUN MEMORY, AMARILLO, AZUL/D/MO, AZUL, AUDIO, SEARCH, SKIP NEXT, SKIP PREV, REPEAT, MANUAL/PRESET, SOUND EFFECT, EJECT, PAUSE, STOP, REW, PLAY, FWD, .