

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



ON
MUTE
PROGRAM
CLEAR
1/2/3/4/5
6/7/8/9/0
FM MODE / FUNC
TUNE MODE / SELECT
TIME
BAND
AUTO TUNE
TEXT
VOLUME+
VOLUME -
SKIP NEXT
SKIP PREV
TUNE+
TUNE -
FILE -
FILE+
ENTER
REPEAT
SLEEP
RANDOM
RDS / INFO

MEMORY
RPT A - B
REC MODE
PAUSE
STOP
REC
REW
PLAY
FWD
OFF
AUX
CD
MP
TAPE
TUNER
USB
VIDEO
FOLDER+
FOLDER -
TIMER
DIMMER

POWER, MUTE, PROGRAM, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0FM MODE / FUNC, / SOURCE, TUNE MODE / SELECT, TIME, BAND, AUTO TUNE, TEXT, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, TUNE+, TUNE, ABAJO, FILE, IZQUIERDA, FILE+, DERECHA, ENTER, REPEAT, BACK, SLEEP, RANDOM, TV/DTV, RDS / INFO, INFO, MEMORY, EPG, RPT A, FAV, REC MODE, / NET TV, PAUSE, STOP, / SMART, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, OFF, AUX, TAPE, TUNER, USB, VIDEO, FOLDER+, FOLDER, TIMER, DIMMER, .