

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY/ON
AUDIO
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
INPUT SELECT
HOME MENU
DISPLAY
ONE TOUCH PLAY
ANGLE
SUBTITLE
CH+
CH -
UP
DOWN
LEFT
RIGHT
ENTER
RETURN / EXIT
TOP MENU / DISC NAVIG.
A.TV/D.TV
INFO
GUIDE
REC MODE

PAUSE LIVE TV
STOP REC
RED
GREEN
YELLOW
BLUE
DVD
HDD
HMG PC VIDEO
HMG MUSIC
HMG PHOTO
SKIP NEXT
SKIP PREV
CM BACK
CM SKIP
TIMER REC
HELP
OPEN/CLOSE
PAUSE
STOP
REC
REW
PLAY
FWD

STANDBY/ON, POWER, AUDIO, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 0INPUT SELECT, / SOURCE, HOME MENU, DISPLAY, ONE TOUCH PLAY, ANGLE, SUBTITLE, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN / EXIT, BACK, TOP MENU / DISC NAVIG, SLEEP, ATV/DTV, TV/DTV, INFO, GUIDE, EPG, REC MODE, FAV, PAUSE LIVE TV, STOP REC, / SMART, ROJO, VERDE, AMARILLO, AZUL, DVD, HDD, HMG PC VIDEO, HMG MUSIC, HMG PHOTO, SKIP NEXT, SKIP PREV, CM BACK, CM SKIP, TIMER REC, HELP, OPEN/CLOSE, PAUSE, STOP, REC, REW, PLAY, FWD, .