

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



TV MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
CH.LIST
PBC
GOTO
ADJUST
TXT/MIX
VOL +/-
CH +/-
UP
DOWN
LEFT
RIGHT
OK
RECALL/PREV
SLEEP
TV/RADIO
INFO / DVD DISPLAY
EPG
FAV

ASPECT
FREEZE
HOLD / A - B
RED
GREEN
YELLOW
BLUE
AUDIO
DVD SETUP
MENU
REVEAL / RETURN
SIZE
USB LIGHT
SUBTITLE
SKIP NEXT/PREV
SUBPAGE/REPEAT
SOUND
PIC
TITLE
INDEX/ANGLE
EJECT
PAUSE
STOP
REW/FWD
PLAY/PAUSE

POWER, MUTE, TV MENU, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, CHLIST, PBC, GOTO, ADJUST, TXT/MIX, VOL +/, CH +/-, P +/, ABAJO, IZQUIERDA, DERECHA, RECALL/PREV, BACK, SLEEP, TV/RADIO, TV/DTV, INFO / DVD DISPLAY, INFO, EPG, FAV, ASPECT, / NET TV, FREEZE, HOLD / A, / SMART, ROJO, VERDE, AMARILLO, AZUL, AUDIO, DVD SETARRIBA, REVEAL / RETURN, SIZE, USB LIGHT, SUBTITLE, SKIP NEXT/PREV, P +/, SUBPAGE/REPEAT, SOUND, PIC, TITLE, INDEX/ANGLE, EJECT, PAUSE, STOP, REW/FWD, VERDE/AZUL, PLAY/PAUSE, .