

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY-ON
AUDIO
HOME MENU
EXIT
1/2/3/4/5
6/7/8/9/0
INPUT SELECT
TV / DVD
DISPLAY
ONE TOUCH COPY
ANGLE
TEXT
CM SKIP
CM BACK
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
OK
RETURN
TIMER REC
A. TV / D. TV
INFO

GUIDE
DISC NAV. / TOP MENU
OPEN / CLOSE
PAUSE
STOP
REC
REW
PLAY
FWD
CLEAR
DVD
HDD
HMG PHOTO
HMG PC-VIDEO
HMG MUSIC
CHANNEL+
CHANNEL-
STOP REC
HELP
REC MODE
PAUSE LIVE TV
RED
GREEN
YELLOW
BLUE

STANDBY, POWER, AUDIO, MUTE, HOME MENU, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, / AV, TV / DVD, DISPLAY, ONE TOUCH COPY, ANGLE, TEXT, CM SKIP, VOL+, CM BACK, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, RETURN, BACK, TIMER REC, SLEEP, A TV / D TV, TV/DTV, INFO, GUIDE, EPG, DISC NAV / TOP MENU, FAV, OPEN / CLOSE, PAUSE, STOP, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, CLEAR, DVD, HDD, HMG PHOTO, HMG PC, VIDEO, HMG MUSIC, CHANNEL+, CHANNEL, STOP REC, HELP, REC MODE, PAUSE LIVE TV, .