

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER RECEIVER
MUTE
MENU
STRAIGHT
HDMI 1/2/3/4/5/6
AUX
USB
NET
MODE
POP – UP MENU
DISPLAY
STRAIGHT
SETUP
OPTION
VOLUME+
VOLUME -
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
SLEEP

FM
INFO
MEMORY
DIRECT
PAUSE
STOP
REW
PLAY
FWD
AV 1/2/3/4/5/6
SCENE BD/DVD
SCENE TV
SCENE NET
SCENE RADIO
PRESET+
PRESET -
TUNING+
TUNING -
ZONE A
ZONE B
BASS
AM
MOVIE
MUSIC
SUR. DECODE

POWER RECEIVER, POWER, MUTE, MENU, STRAIGHT, EXIT, HDMI 1/2/3/4/5/6, 1/2/3/4/5/6, AUX, USB, NET, MODE, / SOURCE, POP, ARRIBA MENU, DISPLAY, SETARRIBA, OPTION, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, TV/DTV, INFO, MEMORY, EPG, DIRECT, FAV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AV 1/2/3/4/5/6, SCENE BD/DVD, SCENE TV, SCENE NET, SCENE RADIO, PRESET+, VOL+, PRESET, VOL, TUNING+, TUNING, ZONE A, ZONE B, BASS, MOVIE, MUSIC, SUR DECODE, .